



## LR 330 Comfort Air purifier



german  
engineering




Air cleaning through a three layer filter system  
(prefilter + activated carbon filter + EPA filter\*)



For rooms up to 35 m<sup>2</sup>



2-in-1: Air cleaning and air humidification  
in one device

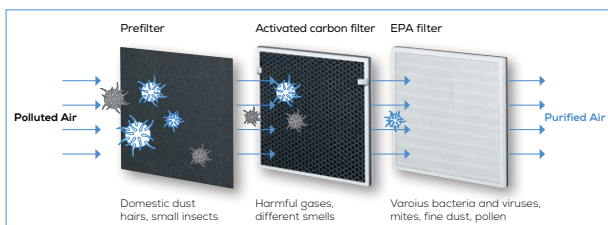

Function principle of the air purifier: Domestic dust, animal hairs, smells, pollen, harmful gases and various bacteria and viruses are filtered out of the air using a triple-layer filter system.



Removable water reservoir (approx. 4.6 litres) – easy to handle and fill

With current indoor environment air humidity display

Setting the required air humidity (40 - 80 %)

Humidification performance up to 220 ml/h

With an air flow rate of up to 200 m<sup>3</sup>/h

Timer function

3 fan levels

With illuminated display

Automatic switch-off

Dish-washer-safe water basin

Quiet operation

Replacement filter with filter change indicator

Pre-filter + Combination filter: 660.11

(Running time of the filter approx. 1000 hours)

220-240V~, 50/60Hz, 35 W

Product measurements (LxWxH): 37.0 x 26.0 x 36.2 cm

Product weight: approx. 6.7 kg

3 year guarantee

Sales unit: 1 / Shipping carton: -

EAN no.: 4211125 66005 5

Item no.: 660.05

\*85% of the particles (e.g. bacteria, viruses, fine dust, pollen)  
can be filtered out