



LW 230 Air washer



 german
engineering

- 


humidification & air purifying
Air humidification and air cleaning in one device
- 

silver ion pads
Silver ion pad - Excellent hygiene standards for the air washer
- 

for rooms up to 40 m²
For rooms up to 40 m²



- Auto-regulating humidification of ambient air by cold evaporation
- Particularly hygienic as no filter mats are used
- Incl. Silvertex[®] fresh air: Against bacteria, fungi and algae in the water - with silver ion pad Item no.: 164.160
- No need to add chemical fluids
- Fan with 3 performance levels
- With water fill level display and automatic switch-off if the tank is empty
- Blue illuminated LCD display
- Easy to maintain and uncomplicated - simple disassembly and can be cleaned in the dishwasher
- Humidification performance auto-regulating for rooms up to: approx. 40 m² (depends on room conditions)
- Cleaning performance up to 20 m² (depends on room conditions)
- Surface of the humidification discs: approx. 2.5 m²
- Quiet, can be operated in the bedroom
- For usage with external timer
- Extremely low power consumption, approx. 2-4-7 watts
- Water quantity: approx. 7,25 l
- Product measurements (LxWxH): 30 x 30 x 34 cm
- Product weight: approx. 5.5 kg
- 3 year guarantee
- Sales unit: 1 / Shipping carton: -
- EAN no.: 4211125 66049 9 (weiß) 4211125 66048 2 (schwarz)
- Item no.: 660.49 (weiß) 660.48 (schwarz)

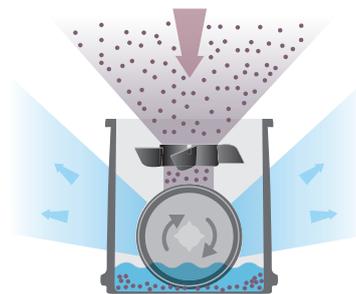

Function principle of the air washer:

Air comes in contact with rotating humidification discs and absorbs water molecules. Air particles like domestic dust, pollen, animal hair adhere to the discs and are rinsed in water.