



LW 230 Air washer



Air humidification and air cleaning in one device



Silver ion pads (Silberionen Pads) -
Excellent hygiene standards for the air washer



For rooms up to 40 m²

Auto-regulating humidification of ambient air by cold evaporation

Particularly hygienic as no filter mats are used

Incl. Silver ion pads (Silberionen Pads): Against bacteria and fungi
in the water - Item no.: 164.160

BAuA Reg.-No: N-100990, Approval number Switzerland: CHZN6738

**Use biocides safely. Always read the label and product information
before use.**

No need to add chemical fluids

Fan with 3 performance levels

With water fill level display and automatic switch-off if the tank is empty

Blue illuminated LCD display

Easy to maintain and uncomplicated - simple disassembly
and can be cleaned in the dishwasher

Humidification performance auto-regulating for rooms up to:
approx. 40 m² (depends on room conditions)

Cleaning performance up to 20 m² (depends on room conditions)

Surface of the humidification discs: approx. 2.5 m²

Quiet, can be operated in the bedroom

For usage with external timer

Extremely low power consumption, approx. 2-4-7 watts

Water quantity: approx. 7.25 l

Product measurements (LxWxH): 30 x 30 x 34 cm

Product weight: approx. 5.5 kg


3 year guarantee

Sales unit: 1 / Shipping carton: -

EAN no.: 4211125 66049 9 (white) 4211125 66048 2 (black)

Item no.: 660.49 (white) 660.48 (black)

Type: LW 220

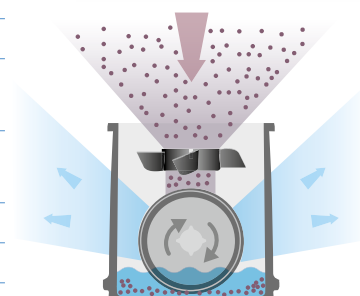

Function principle of the air washer:

Air comes in contact with
rotating humidification discs
and absorbs water molecules.
Air particles like domestic dust,
pollen, animal hair adhere to the
discs and are rinsed in water.