

maremed®



MK 500

beurer
wellbeing

MK 500 maremed® Sea air simulator

german
engineering



Innovative, patented technology for creating an authentic sea air environment



Humidifies the respiratory tract in a natural way



5-in-1 technology: Humidification, air purification, mineralization, sterilisation and air ionization



Breathe more freely with maremed® – even while sleeping

Bringing soothing sea air to your home

Improves breathing intensity and general well-being

Humidifies the airways in a natural way, helps to relieve asthmatic symptoms and promotes restful sleep

Extremely fine nebulisation of sea salt particles in the ambient air

Easy of use with LCD display and sensor touch buttons

6-litre water tank with automatic switch-off

Timer function (1-24h)

3 blower settings

With night mode: super silent operation and display switch-off

Humidification output: 33 ml/h

For rooms: up to 50 m²

Easy-to-clean design: Components easy to dismantle

UVC light and filter change indicator

Max. 24 W

Noise Level: < 29 - 37 dB(A)

Incl. mains adapter

Packaging contains:

- 2 x pre-filters, 1 x water filter, measuring cup
- 1 x 625 g Beurer maremed® special sea salt: for 45 days with 24-hours operation

Product measurements (L x W x H): 38,4 x 30,5 x 34,0 cm


Product weight: 3198 g

3 year guarantee

Sales unit: 1 / Shipping carton: -

EAN no.: 4211125 68119 7

Item no.: 681.19

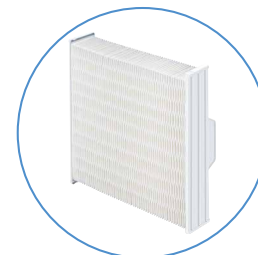

681.19_MK500_2022-05-18_02_DS_EN_BEU Subject to errors and changes

maremed®




MK 500

beurer
wellbeing

Breathe easy, like at the seaside

People who suffer from asthma, allergies and respiratory diseases often see significant benefit from spending time by the sea. The salt and mineral content in the air is particularly soothing for the airways.

Basic functionality

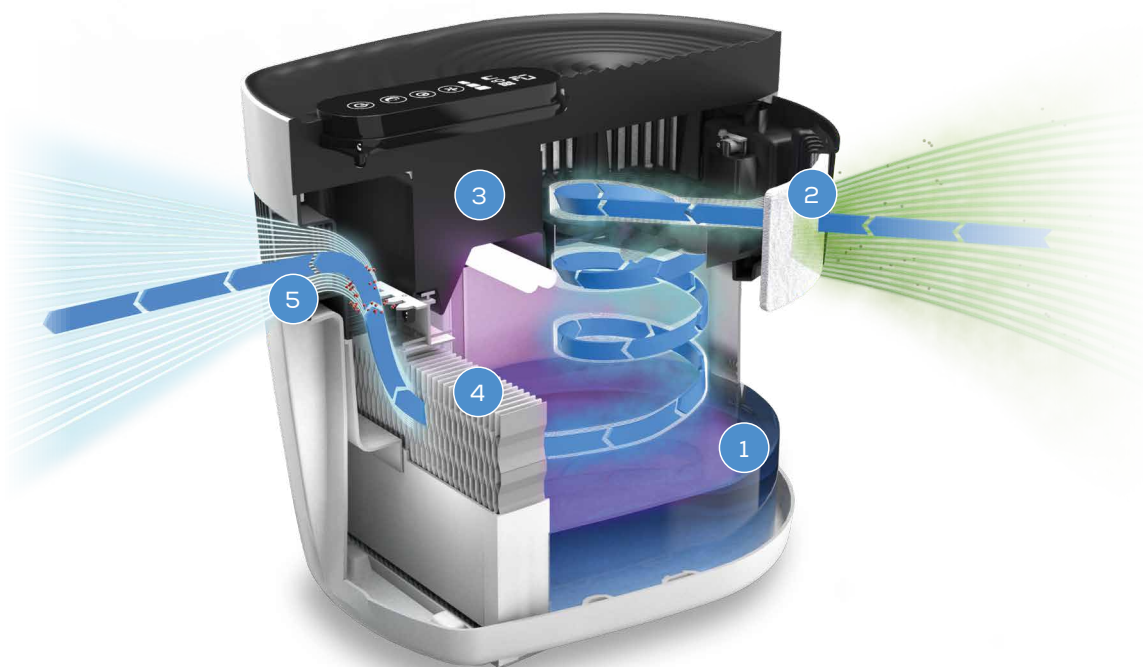

maremed® creates a nature-identical interaction between water, salt and sun, ionised seawater and the sea breeze

- 1 The water tank is filled with special sea salt and water
- 2 The two pre-filters remove dirt particles, pollen, animal hair, fine and domestic dust from the air
- 3 The UVC lamp removes up to 99 % of the bacteria, viruses and microorganisms from the water
- 4 The air is enriched with minerals from the water via the water evaporator block
- 5 Additional ionisation and cleaning is performed by means of an ionisation comb, before the mineralised air is returned into the environment