



LR 210

beurer
wellbeing

LR 210 Air Purifier



 **german engineering**




Air cleaning through a three layer filter system (prefilter + activated carbon filter + HEPA filter H13*)



For rooms up to 26 m² 2)



Additional air cleaning using a selectable ionic function

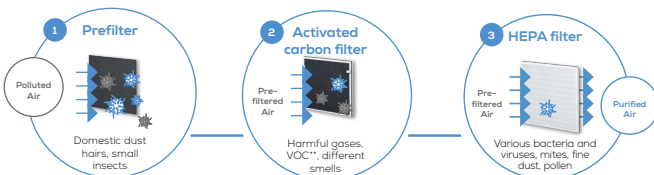

Function principle of the air purifier: Domestic dust, animal hairs, smells, pollen, harmful gases and various bacteria and viruses are filtered out of the air using a triple-layer filter system.



For optimum ambient air also while sleeping

Allergy sufferers can breathe easily

For rooms up to 10 m² 1) - 26 m² 2)

With timer function

3 fan levels

With illuminated panel

With night mode: ultra quiet operation with dimmed operating panel

Replacement filter with filter change indicator

Pre-filter + Combination filter: 693.01

(Running time of the filter: approx. 4320 hours)

220 - 240V, 50-60 Hz, 60W

Product measurements (LxWxH): 17.5 x 27.3 x 30.0 cm

Product weight: approx. 3.2 kg

3 year guarantee

Sales unit: 1 / Shipping carton: -

EAN no.: 4211125 69300 8

Item no.: 693.00



*99.95% of the particles (e.g. bacteria, viruses, fine dust, pollen) can be filtered out
**VOC = Volatile organic compounds

1) ANSI/AHAM AC-1 2015
2) NRCC-54013-2011