




Sehr leiser Betrieb
very silent operation

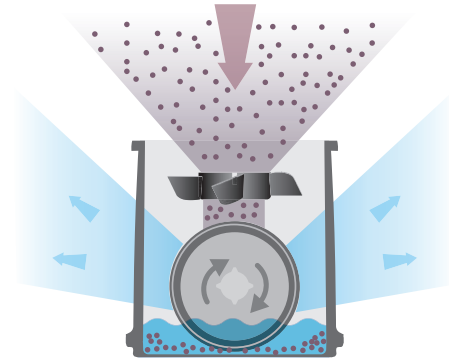

Funktionsweise des Luftwäschers:
Luft streicht an den drehenden Befeuchterscheiben vorbei und nimmt Wassermoleküle auf. Luftpartikel wie Hausstaub, Pollen, Tierhaare haften an den Scheiben und werden im Wasserbad abgewaschen.

Function principle of the air washer:
Air comes in contact with rotating humidification discs and absorbs water molecules. Air particles like domestic dust, pollen, animal hair adhere to the discs and are rinsed in water.

LW 220 Luftwäscher

- Luftbefeuchtung und Luftreinigung in einem Gerät
- Selbstregulierende Befeuchtung der Raumluft durch Kaltverdunstung
- Luftreinigung ohne Filtermatten: entfernt Hausstaub, Pollen, Tierhaare und Gerüche
- Besonders hygienisch, da ohne Filtermatten
- 3 Leistungsstufen des Ventilators
- Mit **Wasserfüllstandsanzeige** und **Sicherheitsabschaltung** bei leerer Wanne
- Blau beleuchtetes LCD-Display**
- Pflegeleicht und unkompliziert - einfache Zerlegung und **Reinigung in der Spülmaschine**
- Befeuchtungsleistung selbstregulierend (abhängig von den Raumbedingungen) **geeignet für Räume bis ca. 40 m²**
- Reinigungsleistung bis 20 m² (abhängig von den Raumbedingungen)
- Fläche der Befeuchtungsscheiben: ca. **2,5 m²**
- Flüsterleise**, Betrieb im Schlafzimmer möglich
- Einsatz mit Zeitschaltuhr möglich
- Extrem niedriger Stromverbrauch, ca. 2-4-7 Watt
- Inklusive 0,2l Wasserzusatz „BEURER AquaFresh“ gegen Bakterien, Algen und Pilze
- Inklusive 0,25l Reinigungszusatz „BEURER Antical“ zur Entkalkung der Befeuchterscheiben und der Wanne
- Wasserfüllmenge: **ca. 7,25 l**
- Produktmaße (LxBxH): 30 x 30 x 34 cm
- Produktgewicht: ca. 5,5 kg
- 3 Jahre Garantie

Nachbestellung Aquafresh:
Art.-Nr.: 162.955 EAN-Nr.: 4211125 19245 7

Nachbestellung Antical:
Art.-Nr.: 162.956 EAN-Nr.: 4211125 19246 4

VE: 1 / Transportkarton: -

EAN-Nr.: 4211125 66017 8 (weiß)
4211125 66016 1 (schwarz)

Art.-Nr.: 660.17 (weiß)
660.16 (schwarz)



LW 220 Air washer

- Air humidification and air cleaning in one device
- Auto-regulating humidification of ambient air by cold evaporation
- Cleans air without filter mats: removes dust, pollen, animal hair and odours
- Particularly hygienic as no filter mats are used
- Fan with 3 performance levels
- With **water fill level display** and **automatic switch-off** if the tub is empty
- Blue illuminated LCD display**
- Easy to maintain and uncomplicated – simple disassembly and **can be cleaned in the dishwasher**
- Humidification performance auto-regulating **for rooms up to: approx. 40 m²** (depends on room conditions)
- Cleaning performance up to 20 m² (depends on room conditions)
- Surface of the humidification discs: approx. **2.5 m²**
- Quiet**, can be operated in the bedroom
- For usage with external timer
- Extremely low power consumption, approx. 2-4-7 watts
- Includes 0.2l "BEURER AquaFresh" water additive against bacteria, algae and fungi
- Includes 0.25l "BEURER Antical" cleaning additive to descale the humidification discs and the tub
- Water quantity: approx. **7.25 l**
- Product measurements (LxWxH): 30 x 30 x 34 cm
- Product weight: approx. 5.5 kg
- 3 year guarantee

Replacement Aquafresh:
Item no.: 162.955 EAN no.: 4211125 19245 7

Replacement Antical:
Item no.: 162.956 EAN no.: 4211125 19246 4

Sales unit: 1 / Shipping carton: -

EAN no.: 4211125 66017 8 (white)
4211125 66016 1 (black)

Item no.: 660.17 (white)
660.16 (black)

